

Bay Networks™

Technical Solutions Center

Customer Support Bulletin

Number: CSB- 9801005

Released: January 28, 1998

Subject: Manual installation instructions for Accelar Management Software

Product: Accelar Management Software version 1.01 (all Unix platforms)

Description: The "Installing the Accelar 1000 Series Chassis" manual contains several textual errors. In addition, the *install_accelar_dmvm* script and *readme.txt* file found on the *Accelar Series 1000 Software 1.0 (Windows 95/NT, Solaris, and HP-UX)* CD in the *dm-unix* directory contain textual and technical errors that will prevent the Accelar Management Software (Unix) from loading correctly.

Discussion: A corrected version of the installation script can be found on the following World Wide Web Page:

http://support.baynetworks.com/software/routingswitches/accelar_1000.html

If you do not have Internet Access or are unable to obtain this corrected file, you may install the Accelar Management Software manually. To properly install the Accelar Management Software, please use the following to replace the "Installing Accelar Management Software" section on page in the "Installing the Accelar 1000 Series Chassis" manual.

Installing Accelar Management Software (Unix)

To install Accelar management software:

1. Insert the *Accelar Series 1000 Software 1.0 (Windows 95/NT, Solaris, and HP-UX)* CD into the CD-ROM drive.
2. Log in as the root user or *su* to root and mount the CD onto the */cdrom* directory. If you are unfamiliar with this procedure, please refer to the System's Administration guide specific to your Operating System.
- 3a. For Solaris systems, change directory to */cdrom/cdrom0/dm-unix*.
- 3b. For HP-UX systems, change directory to */cdrom/DM-UNIX*.
- 4a For Solaris systems, copy the software into */tmp* with the following command:

```
# cp dm_v101_tar.z /tmp/dm_v101_tar.Z
```

Note that the suffix needs to be changed from “.z” to “.Z” (lower-case ‘z’ to upper-case ‘Z’)

4b For HP-UX systems, copy the software into */tmp* with the following command:

```
# cp "DM_V101_TAR.Z;1" /tmp/dm_v101_tar.Z
```

5. Change directory into the directory where you wish the Accelar management software to be installed. The software will automatically be loaded into a subdirectory called “dm_v101”. For example, if you wished to install the software into the */opt/dm_v101* directory, change directory to */opt*.

6. Uncompress and untar the software with the following command:

```
# zcat /tmp/dm_v101_tar.Z | tar xvf -
```

7. Once installed, change directory into the *dm_v101* directory and execute:

```
# ./standalone_setup
```

8. After installation, each Accelar software user’s environment must be set correctly. Assuming you installed the software into the */opt/dm_v101* directory, set the *DMPATH* variable using one of the following instructions:

a. If you use the C-shell, add the following to your *.cshrc*:

```
% setenv DMPATH /opt/dm_v101
```

b. If you use the Bourne shell or Korn shell, add the following to your *.profile*:

```
$ DMPATH=/opt/dm_v101; export DMPATH
```

If you installed into a different directory, substitute the directory where you installed the software for */opt/dm_v101*. After modifying the appropriate file, you must source the file for the changes to take effect.

Other Notes:

On page 12, in Table 3, **HP-UX 10.2** should be listed as a supported Operating System.

On page 13, in the “Integrating Accelar Management Software into HP OpenView”, the command to start Device Manager in step 1 should be **dm** and not **DM**.

On page 13, in Table 4, the first command should read **ovw -fields** instead of **pvw -fields**.

Contact Information:

Technical Support for North and South America
Technical Support for Europe, Middle East and Africa
Technical Support for Australia, Asia and the Pacific

1-800-252-6926
33-492-966-968
61-2-9927-8800